

# LANSEN

---

## QUICK INSTALLATION GUIDE

---

OUTDOOR LONG-RANGE BATTERY GATEWAY WITH OPTIONAL  
USE FOR ONE OR TWO EXTERNAL ANTENNAS

LAN-WMBUS-GW5-BE-LR-A1/A2-(X)-CATM1-(X)  
LAN-WMBUS-GW5-BE-LR-A1/A2-(X)-CAT1/4G-(X)



# ENGLISH

## SYMBOLS:



Important information regarding instructions or recommendations for installation of device.



Warning, risk for bodily harm if handled without care.

## NOTICE:



We are not responsible for any damage, malfunction, or non-compliance resulting from the use of unauthorized accessories or modifications to this device.



Do not attempt to alter or repair the device, if you are experiencing malfunction make sure to contact your place of purchase or visit our website.



It is recommended to use ESD protection to prevent potential damage to this product.

## WARNING:



Battery: Fire, explosion, and severe burn hazard. Do not recharge, disassemble, heat above 100°C, incinerate, expose contents to water. Do not crush.

## Additional information

Please note that SIM-card, antennas, and antenna cables are not included. See our full range of antennas, cables, and other accessories under our "accessories section" online.

All articles listed can be found on our website: <https://www.lansen.io/assortment/accessories/>

Article Name	Description
<a href="#">LAN-WMBUS-D2-TC</a>	Lansen Configuration Dongle
<a href="#">Lansen Configurator</a>	Software for Lansen Dongle
<a href="#">LAN-CF-CABLE</a>	Configuration Cable, USB
<a href="#">LAN-A-PMB-KIT-ID58-78</a>	Pole mounting kit
<a href="#">LAN-MAG-R4</a>	Magnet with telescopic shaft
<a href="#">LAN-R4-IP-KIT</a>	Sealing kit for A1 enclosure
<a href="#">LAN-ANT-868-HW-DP</a>	868MHz Dipole antenna, SMA, 130mm
<a href="#">LAN-ANT-868-PR-3LW</a>	868MHz antenna, outdoor use, 1,2 meters, 4dB gain
<a href="#">LAN-SMA-N-L300</a>	SMA-to-N antenna cable, 300 cm
<a href="#">LAN-SMA-N-L100</a>	SMA-to-N antenna cable, 100 cm
<a href="#">LAN-IPEX-SMA-IP-110</a>	IPEX-to-SMA cable, 110 cm
<a href="#">LAN-BATT-BR-B1</a>	Battery with supercap, 3.6v, 38Wh, black


## INTRODUCTION

The battery powered wM-Bus gateway is a highly configurable plug-and-play device used for collecting data from wM-Bus meters and transmitting the data using LTE CAT-M1 or LTE CAT1/4G. The device has a sleek and discrete design with high security and performance.

For more information, go to our website: [www.lansen.io](http://www.lansen.io).

## LABEL INFORMATION

The label on the device gives useful information about your device, see example below.

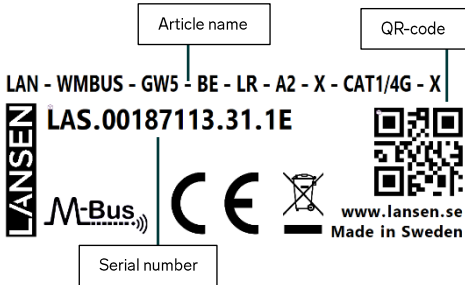


Article name: Full article name code of the device.

QR-code: Includes the wM-Bus serial number of the device.

Serial number: Full device information (example above):

LAS.00187113.31.1E

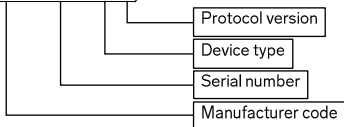

## Specifications


	wM-Bus	LTE CAT-M1	LTE CAT1/4G
Frequency band(s)	M: 868,000 MHz to 868,600 MHz  N: 868,700 MHz to 869,200 MHz	LTE-M B1/B2/B3/B4/B5/B8/B12/B13/B14/ B18/B19/B20/B25/B26/B27/B28/B66/B85	LTE-FDD B1/B2/B3/B4/B5/B7/B8/B12/B13/B18/B19/B20/B2/B26/B28/B66/B71  LTE-TDD B34/B38/B39/B40/B41
Output power (ERP)	< 14 dBm / < 25 mW	20 or 23 dBm / 100 or 199,5 mW	23 dBm / 199,5 mW
Configurable	Yes, either with Lansen USB-Dongle, USB-C Cable, or from MQTT. For more information, refer to the configuration manual.		
Battery	2xER34615+SPC1550/W Li-SOCL <sup>2</sup> Nominal voltage: 3.6 V Nominal capacity: 38000 mAh		

### RECOMMENDED PLACEMENT INSTRUCTIONS:

- Mount preferably on walls, indoors and away from water. Can be mounted on ceilings (A1).
  - Can be mounted on walls, ceilings, poles, pipes, and masts (A2).
  - Keep at least 30cm in all directions to other objects/walls/ceiling/floor.
  - The label on the device should be on the left side.
- IF X VERSION: The label on the device **MUST** be on the left side and the external SMA connection **MUST** point downwards for the device to be fully protected against water.

## MOUNTING INSTRUCTIONS

(A1) It is recommended to install the gateway indoors to a wall, but it can also be installed to the ceiling. It is highly recommended to mount the device as shown in the next image. (A2) It is recommended to install the gateway upright on a wall, pole, pipe, or similar, but it can be installed on a ceiling as well. It is highly recommended to mount the device as shown in the next image.

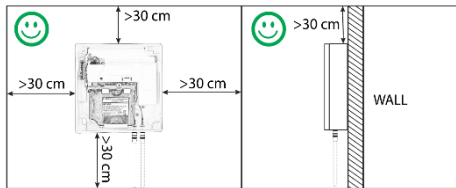


## Installing and mounting

### Step 1:

Unscrew the screw (red circle) and remove the cover by pushing the clips (green circles) at both sides of the cover.


**Note:** The screw is a Security Torx T20H (with a small pin in the middle).

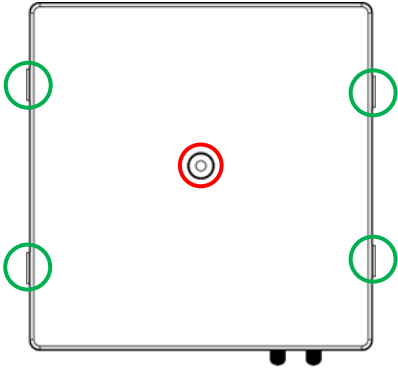

### Step 2:

Disconnect the battery, if connected, by pulling on the battery cable (green circle).

Prepare to insert a SIM-card (not included) by removing the poke protection - Unscrew the two screws (Torx T10, red circles) and remove the poke protection.

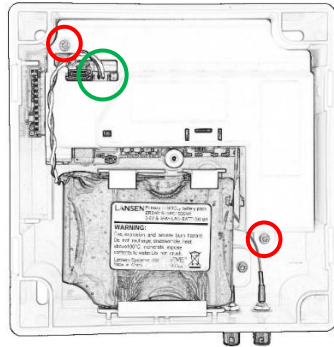


### Step 3:

With the poke protection removed, a SIM-card holder is visible. Insert a nano sized SIM-card by sliding it in.

**Note:** The orientation of the SIM-card must be exactly as shown below with the cut corner (green arrow) of the SIM-card in the correct way, otherwise the SIM-card will not have contact with the SIM-card holder.

**Note:** Make sure the SIM-card is not pushed in too far. This might cause it to not get picked up by the SIM-card holder.

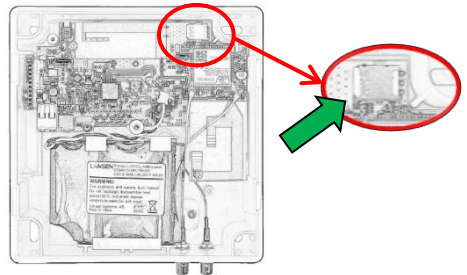

#### Step 4:


Mount the poke protection and the screws (Torx T10, red circles), which were removed in Step 2, into the holes.

Depending on how the gateway is going to be installed, one must follow different mounting instructions:

- a. Mounting on a wall: Go to Step 5.
- b. Mounting on pole or mast: Go to Step 6.

#### Step 5: Mounting on a wall

Hold the gateway where it's going to be mounted. Mark the holes (red circles), pre-drill if necessary (depending on the material), and mount the device by using four screws (not included). Continue to Step 7.

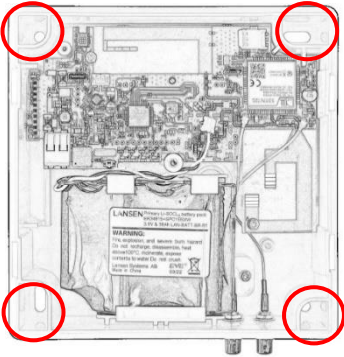

#### Step 6: Mounting on a pole/mast (A2)

Install the Lansen pole mounting kit (article number LAN-910-0066) on the back of the gateway. Pull the straps through the holes and wrap it around the pole or pipe which the gateway is going to be mounted on and tighten the straps, so it is securely mounted.


**Note: More detailed instructions with pictures will be available in the next version of the installation guide!**

#### Step 7: Startup sequence

**Note: The LEDs in this step are located at the center of the device (red circle).**

Connect the battery cable (green circle). A beep will be heard and all 4 LEDs on the strip will light up. 1-2 minutes after the first beep you will hear a second beep, this signifies that the gateway startup sequence is finished, and it is now listening for packages, this takes 1-2 minutes.

Once it has listened for packages, the device will attempt to connect to the MQTT server. For more information look at **Step 9** with its indication table.

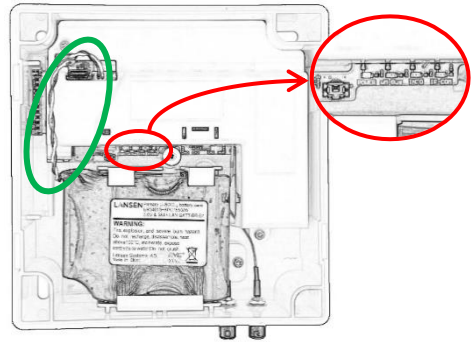

### Step 8: Configuration of device.

During the first 3-4 minutes after the startup sequence is complete, the device accepts configuration data. We recommend configuring using a Lansen USB-dongle (LAN-WMBUS-D1/D2-TC) with the software *Lansen Configurator* during this time frame. Setup the gateway according to your needs, making sure to setup the MQTT server settings correctly, otherwise the gateway will be unable to upload data. After 1-2 minutes, the gateway will try to connect to a cellular network and upload data to an MQTT server.


**Note:** If the gateway comes pre-configured with the correct MQTT settings then skip this step.

**Note:** It's important that all settings, especially the MQTT server settings, are entered correctly for the device to work properly.

**Note:** MQTT settings are company specific.

**Note:** It is also possible to configure the device using a USB to USB-C cable combined with *Lansen Configurator*. Important to note is that the cable will supply power.


The gateway will indicate differently depending on the status to the cellular network using the LED in the upper right corner (red arrow). See Step 9 for Indications.

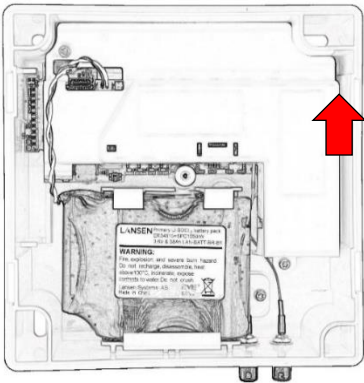

### Step 9: Indications

A gateway has two places with LEDs – One LED strip for status of the device (red circle) and one LED for status of cellular connectivity (red arrow).

**Note:** For battery gateways all LEDs are turned off 30 minutes after startup to save power. Indications are activated again for 30 minutes if the device is awakened using a magnet.

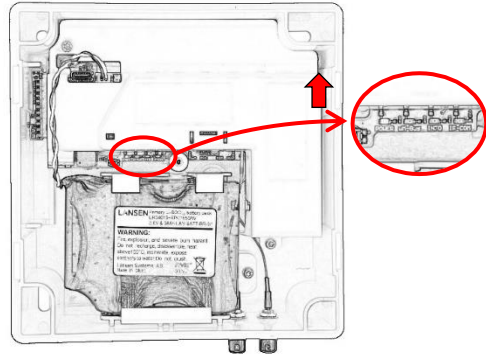


For more information about indications, go to the next page.

LED Strip (red circle)			
POWER	Green	Steady on  Blinking 2 times/second	The device has power.  Low battery
POWER wM-Bus INFO IP-COM	Green Red Red Red	All steady on	Startup sequence active.
wM-Bus	Red	Quick flash	New packet received by the wM-Bus radio
INFO	Red	Steady on	wM-Bus radio is on/listening for radio packets.
IP-COM	Red	Steady on   Blinking	Active connection to the MQTT server.  Modem active but not connected to MQTT Server.
Cellular network LED (red arrow)			
Red	Flash every 300 ms (0.3 s)		The device is sending data.
Red	Steady on/off + flash every 300 ms (0.3 s) in intervals – Repeating this pattern.		Not registered to a network, rebooting modem, attempting to connect to a network.

#### Step 10:

Attach the cover and mount the screw (marked with a red circle on the image below). Make sure the clips at both sides of the cover are firmly attached.

**Note: The screw is a Security Torx T20H (with a small pin in the middle).**

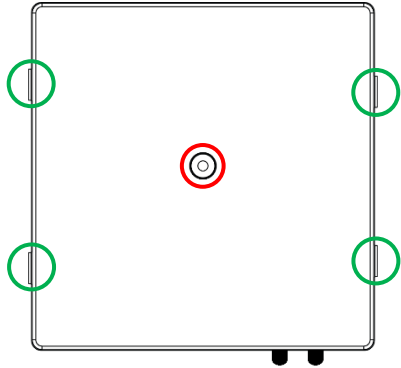

#### Step 11: Optional if using external antennas

This gateway can be enabled to use external antennas for either wM-Bus, cellular network, or both. Go to the corresponding step below depending on the variant you are installing (see label on the enclosure or poke protection).

**Note: Enable external antennas by configuring using a Lanser USB-dongle (LAN-WMBUS-D2-TC) together with the software Lanser Configurator or by sending the command using MQTT.**

#### External antenna for wM-Bus

Go to Step 12.

#### External antenna for cellular network

Go to Step 13.

#### External antenna for wM-Bus and cellular network

Go to Step 14.

### Step 12: Antenna for wM-Bus (RX)


This setup uses an external antenna for receiving wireless M-Bus and internal antenna to transmit on cellular network to MQTT.

**Note:** Make sure to use an external antenna operating in a frequency band suited for wM-Bus data (868 MHz).

**Note:** Make sure to enable the parameter to use external antenna for wM-Bus by using Lanser Configurator or sending a command using MQTT.

**Note:** Use the RIGHT SMA connection for wM-Bus.

Attach an external antenna to the device, either directly on the SMA connection (left picture below) or with an antenna cable (right picture below). Typically, smaller antennas are mounted directly on the SMA connection while larger antennas require being mounted upright and with an antenna cable.

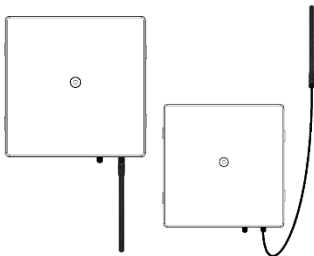

### Step 13: Antenna for cellular network (TX)


This device supports an external antenna for transmitting using cellular to MQTT and uses an internal antenna to receive wM-Bus.

**Note:** Make sure to use an external antenna operating in the frequency band used for your cellular network.

**Note:** Make sure to enable the parameter to use external antenna for cellular network by using Lanser Configurator or sending a command using MQTT.

**Note:** Use the LEFT SMA connection for cellular antenna.

Attach an external antenna to the device, either directly on the SMA connection (left picture below) or with an antenna cable (right picture below). Typically, smaller antennas are mounted directly on the SMA connection while larger antennas require being mounted upright and with an antenna cable.

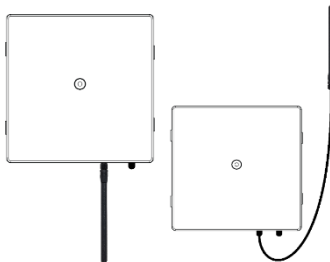




#### Step 14: Antennas for wM-Bus and cellular network

This device supports external antennas for receiving wM-Bus and transmitting using cellular to MQTT.

Attach two external antennas to the device, either directly on the SMA connection or with an antenna cable. When using both external antennas we recommend placing them as far apart as possible (AT LEAST 50 CM) to avoid interference, either by using 2 antenna cables or attaching 1 directly on the device and 1 with a cable. Typically, smaller antennas are mounted directly on the SMA connection while larger antennas require being mounted upright and with an antenna cable.

**Note: Make sure to enable the parameter to use both external antenna for wM-Bus and cellular data, e.g., by using Lansen Configurator.**

**Note: Use the RIGHT SMA connection for wM-Bus and the LEFT SMA connection for the cellular antenna.**

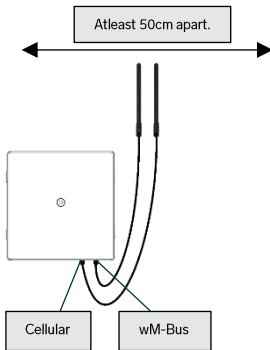

**LANSSEN**

#### SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, Lansen Systems AB declares that the radio equipment type defined by article name on the sticker is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://www.lansen.io/DOC>

